


BONNOX CLAMP BAR

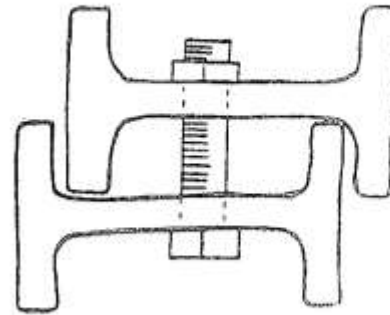

TOP VIEW

Please note: the original holes on the Y-Standard are centred and as such the bolts through the two Y-standards should be placed off centre, new holes will have to be drilled.

Two I beam standards bolted together make a clamp bar.

